



OWNER'S MANUAL FOR THE E3X4TBT TRAILER

CONGRATULATIONS!

You are now the proud owner of a BARRETO trailer. The following pages have important safety information as well as a detailed view of your trailer, along with corresponding part numbers. If you have any questions or need any replacement parts in the future, please contact us at your convenience. Our toll-free phone number, fax and email are listed below and parts may be ordered through any of these methods.

THANK YOU for your patronage and confidence in BARRETO equipment.

Barreto Manufacturing, Inc.
Innovative Equipment Engineered to Last
66498 Hwy 203, La Grande, OR 97850
(800) 525-7348 (541) 963-7348
FAX (541) 963-6755
E-Mail: info@barretomfg.com
Web Site: <http://www.barretomfg.com>

The Barreto Tilt Bed Trailer, Model Number E3X4TBT, is designed specifically and solely for transporting Barreto tillers. It has a special bracket for locking the tiller in place while in transit. There are no provisions for any other type of tie-down apparatus, which makes it ill-suited and unsafe for hauling anything except Barreto specifically designed equipment.

Using the Barreto Model E3X4TBT trailer for any purpose other than transporting Barreto tillers could pose a safety hazard and would null and void any manufacturer's warranty and/or liability.

Barreto Manufacturing, Inc. accepts no liability for damage to the trailer or transported goods other than Barreto specifically designed equipment. Barreto Manufacturing, Inc. also accepts no liability for injury or damage of any kind related to unauthorized use of the Barreto Tilt Bed Trailer.

Be sure to read and observe the safety instructions for proper use of the Barreto Tilt Bed Trailer. If there are any questions regarding proper use, please contact Barreto Manufacturing, Inc. or an authorized Barreto Dealer.

SAFETY INSTRUCTIONS/CHECKLIST

Be sure to obey all traffic laws and rules of the road while towing the Barreto Tilt Bed Trailer. Never exceed 45 miles per hour while towing the trailer. The towing vehicle should be in legal operating condition. If local law requires trailer lights, be sure they are in good repair and are in proper working condition.

Refer to the following checklist before towing:

- Towing vehicle should have a 2" ball. Be sure it is in good repair and securely fastened to the vehicle.
- Securely fasten the hitch to the ball by tightening the hitch nut.
- Cross the chains under the trailer tongue to prevent the tongue dropping to the ground if the trailer comes loose.
- Attach the safety chain to the towing vehicle in such a way that it cannot come off accidentally.
- Check the hitch-to-ball connection after driving a few blocks and re-tighten if necessary.
- Allow only enough slack in the chains to permit proper turning of the vehicles. Do not let chains drag on the ground or be drawn up too tight. Slack strength should hold the tongue and coupler off the ground with the trailer loose.
- The bolts that hold the lock-on chain to the trailer should be in good repair. These bolts prevent the tiller from shifting from side to side.
- The clevis pins should be placed behind the tiller bumper with clips in place to prevent bouncing out.
- Do not use the Barreto Tilt Bed Trailer for any purpose other than transporting a Barreto Tiller!

Always exercise extreme caution and allow extra clearance while towing a trailer.

DRIVE SAFELY!



BARRETO MANUFACTURING, INC. EQUIPMENT WARRANTY

Barreto Manufacturing, Inc. warrants all BARRETO equipment to be free of defects in material and workmanship for a period of one (1) year, dating from the delivery to the original user.

This warranty is in lieu of all other warranties, whether written or implied, and is limited to:

1. Replacement of parts returned to the dealer and/or factory and determined defective upon inspection. (Replacement for parts to dealers shall be at dealer cost plus shipping charges.)
2. Time for pick-up and/or delivery, transportation of service calls by dealers is excluded. Manufacturer reserves the right to determine reasonable time required for repair.

Warranty does not apply to damage caused by abuse or neglect. Time and materials required for normal maintenance and service are also excluded from warranty coverage.

Engines, engine accessories and tires are warranted by the original manufacturers and are not covered by the Barreto Equipment Warranty. Wear parts such as tiller tines, sprockets, trencher teeth, bearings, etc. are also excluded unless it can be determined that a defect has contributed to premature wear.

SPECIFICATIONS

<u>DIMENSIONS</u>	<u>U.S.</u>	<u>Metric</u>
Empty Weight	260 lbs.	117.93 kg
Gross Weight	900 lbs.	408.23 kg
Length	7'5"	2.26 m
Width	4'3/4"	1.24 m
Bed Size	3' x 4'	.91 x 1.22 m